



Wet Foam, Dry Foam...Who Knew


*It ain't so much
the things you don't know
that get you into trouble.
It's the things that you know
that just ain't so.*

A. Ward

Common knowledge is that dry foam is best, but...that just ain't so.

Dry foam is primarily air bubbles and a little liquid. It will quickly fill a void, but mostly with air! Wet foam will also fill a void, but quickly delivers the liquid it carries to the surrounding surfaces.

Foam is a mixture of surfactant (soap) and a liquid, and the addition of air to make bubbles. Once it is applied, foam is not intended to remain on the treated surface, but to collapse so the liquid forms a surface residue. Dry foam is produced with a large amount of surfactant and a small amount of liquid (insecticide). The bubbles in dry foam are small and they are relatively stable for a long time. There is little liquid insecticide to drain from the bubbles to the surface.

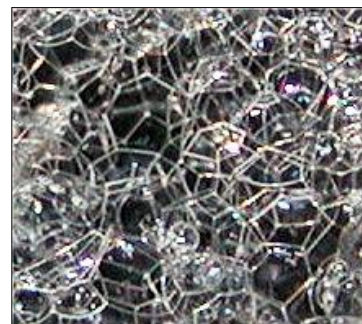

Empty matrix of dry foam

Wet foam is an effective means of spreading liquid insecticide over substrates that are difficult to treat with straight liquid. Wet foam goes through distinct stages from development to collapse. **Stage 1** – Immediately after development the bubbles are large and cover the surface. The transparent shell of each bubble is the surfactant, and the liquid (insecticide) is held between the shell walls. During this stage foam moves easily across a surface and in narrow spaces. **Stage 2** – Liquid begins to drain from the shell; gravity pulls it to the surface. Bubbles break and become smaller; as the liquid drains from the shell walls they break. This foam doesn't move but remains in place. **Stage 3** – The foam collapse is complete and all that remains are small bubbles along the edge. All of the liquid carried in the bubbles is now a residue on the substrate.

Wet foam applied to the void beneath a concrete slab will spread around obstacles and over an uneven soil surface. Within a few minutes the foam collapses and the termiticide liquid is absorbed into the top layer of soil. Wet foam can 'carry' enough liquid to treat the surface and create a treatment zone below the surface.

Dry foam is generally not an effective delivery system for liquid insecticide. In this type foam there is a large amount of surfactant and a small amount of liquid. The bubbles are primarily the shell of the surfactant, there is relatively little liquid insecticide. The liquid quickly drains from the bubbles, and leaves the foam matrix in place. The matrix is very stable and may remain for a long time. The clear and shiny matrix is primarily a surfactant shell structure, and has little insecticide residue.

Save up to **97%** on your chemical costs with the **Versafoamer HH** Here's how:



\$169
Suggested Price

Use the new **hand pump** Versafoamer for all your wall void treatments instead of aerosols!

Do the math! You could spend \$15 on an 18 oz can of termiticide foam. Or, for under \$3 and the Versafoamer, you can mix 128 oz of your favorite residual to foam job after job. It's your choice: 18 oz for \$15.00 or 128 oz for under \$3.00. The expensive aerosol costs .83 per oz. Your favorite residual mixed into the economical Versafoamer costs only .02 per oz. The Versafoamer **saves you 97%** on your chemical costs when doing wall void treatments.

Why pay more? The termite season is short- make the most of it!
For more information:

<http://bgequip.com/versafoamer1.htm>



VERSAGUN

Do it right the **first time** with the Series 400 Termite Tools from B&G



ROBCO QCG

No drips

Series 400 Pro Set comes factory equipped with **tip shut-off** for clean interior sub-slab treatments

No Leaks

Update your old, worn out tools to the latest Series 400 valves. **Stop wasteful leaks** and **reduce your risk** with new properly working application tools


No errors

Precision tips place termiticide right where you need it. Series 400 tools **meet label specifications** for lateral spread of termiticide



VERSATOOL

Free Termite Training CD

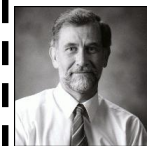

Custom written by William H Robinson PhD

- New technologies
- Tricks/Tips
- Interior treatments
- Trench/rod methods
- Great for new technician training



Avail.
Feb
2007

To order:
rheiney@bgequip.com

For technical support questions, please call or write:

Technical Director: William H. Robinson, PhD
Southeast: Claude Thomas, PhD
Northeast: Dave Mathis
Midwest/West US: Bob Heiney

540-382-9238
904-545-7125
607-760-1661
678-688-5601 x131

brobinson@bgequip.com
cthomas@bgequip.com
dmathis@bgequip.com
rheiney@bgequip.com

